

Installation instructions










a) brackets – floor mounted. You may select from stands for a sub-floor or finished floor. The subfloor variant allows a height tolerance of approx. 50 mm. Dimensions for fastening to the floor is shown in the picture (page 35).

b) wall-mounted. We suggest mounting at least 100 mm above the finished floor. Supplied brackets (2–3 pcs) allow a height tolerance of 20 mm, length tolerance of 10 mm. Distance between the fixing points is shown in the picture (page 35).

Assembly procedure (applicable for all models)

The first step is to measure and fix brackets by drilling. Then you may install the heat exchanger on them and connect it to the heating system. The last step is to mount the case with cover grille and anchor it to brackets. Cover grille of KORALINE Exclusive is detachable for easier cleaning. For detail information see the assembly manual. Units are supplied assembled, except for stands and brackets, valve and a potential extension piece, which are attached to the product separately.

Bottom connection

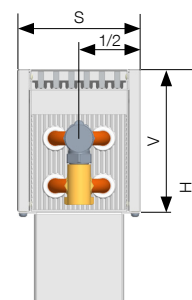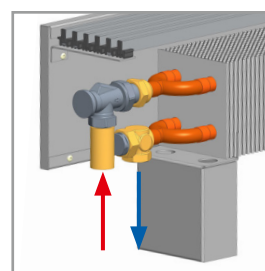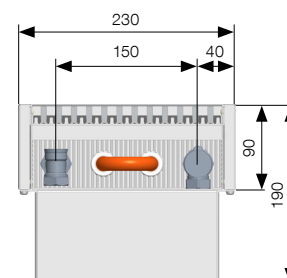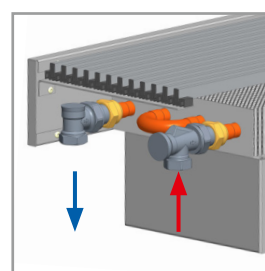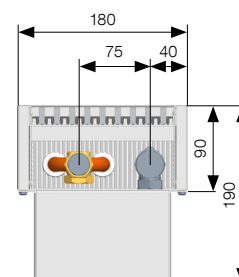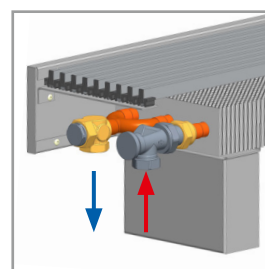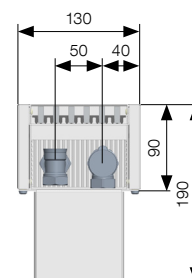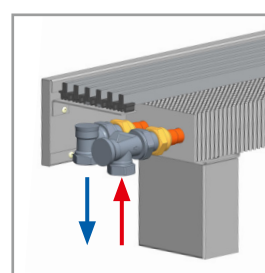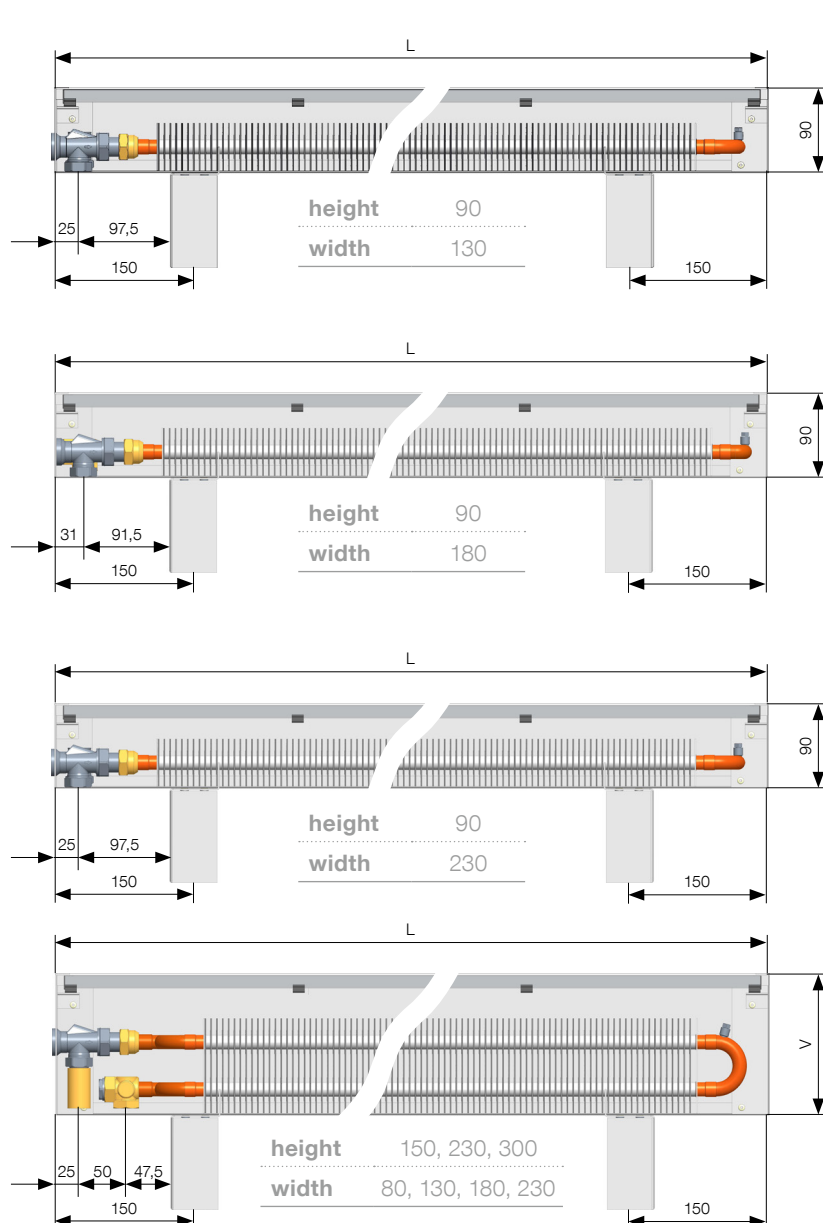

Height of the bracket for finished floor

The height of the bracket for all model ranges of KORALINE is 100 mm.

For all widths (S) 80, 130, 180, 230

Height (V)	Height with bracket (H)
150	250
230	330
300	400